

# Low Cost, Low Power Instrumentation Amplifier

AD620

FEATURES EASY TO USE

Gain Set with One External Resistor (Gain Range 1 to 1000)

Wide Power Supply Range ( $\pm 2.3$  V to  $\pm 18$  V) Higher Performance than Three Op Amp IA Designs

Available in 8-Pin DIP and SOIC Packaging Low Power, 1.3 mA max Supply Current

**EXCELLENT DC PERFORMANCE ("A GRADE")** 

125  $\mu V$  max, Input Offset Voltage (50  $\mu V$  max "B" Grade)

1  $\mu V/^{\circ}C$  max, Input Offset Drift

2.0 nA max, Input Bias Current

93 dB min Common-Mode Rejection Ratio (G = 10)

**LOW NOISE** 

9 nV/ $\sqrt{\text{Hz}}$ , @ 1 kHz, Input Voltage Noise 0.28  $\mu$ V p-p Noise (0.1 Hz to 10 Hz)

EXCELLENT AC SPECIFICATIONS

120 kHz Bandwidth (G = 100) 15 µs Settling Time to 0.01%

**APPLICATIONS** 

Weigh Scales ECG and Medical Instrumentation

Transducer Interface


Data Acquisition Systems

**Industrial Process Controls** 

**Battery Powered and Portable Equipment** 

#### PRODUCT DESCRIPTION

The AD620 is a low cost, high accuracy instrumentation amplifier which requires only one external resistor to set gains of 1 to 1000. Furthermore, the AD620 features 8-pin SOIC and DIP packaging that is smaller than discrete designs, and offers lower

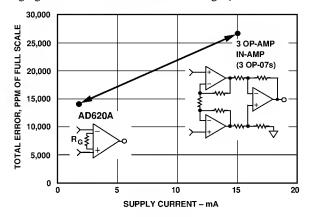


Three Op Amp IA Designs vs. AD620

#### REV. D

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices.

#### CONNECTION DIAGRAM


8-Pin Plastic Mini-DIP (N), Cerdip (Q) and SOIC (R) Packages

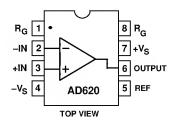

power (only 1.3 mA max supply current), making it a good fit for battery powered, portable (or remote) applications.

The AD620, with its high accuracy of 40 ppm maximum nonlinearity, low offset voltage of 50  $\mu$ V max and offset drift of 0.6  $\mu$ V/°C max, is ideal for use in precision data acquisition systems, such as weigh scales and transducer interfaces. Furthermore, the low noise, low input bias current, and low power of the AD620 make it well suited for medical applications such as ECG and noninvasive blood pressure monitors.

The low input bias current of 1.0 nA max is made possible with the use of Superßeta processing in the input stage. The AD620 works well as a preamplifier due to its low input voltage noise of 9 nV/ $\sqrt{\rm Hz}$  at 1 kHz, 0.28  $\mu V$  p-p in the 0.1 Hz to 10 Hz band, 0.1 pA/ $\sqrt{\rm Hz}$  input current noise. Also, the AD620 is well suited for multiplexed applications with its settling time of 15  $\mu$ s to 0.01% and its cost is low enough to enable designs with one in amp per channel.

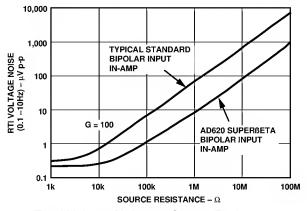

Total Voltage Noise vs. Source Resistance

One Technology Way, P.O. Box 9106, Norwood, MA 02062-9106, U.S.A. Tel: 617/329-4700 Fax: 617/326-8703

## 

Model	Conditions	A Min	D620A Typ	Max	A Min	D620E Typ	B Max	Min	AD620 Typ	S <sup>1</sup> Max	Units
GAIN	$G = 1 + (49.4 \text{ k/R}_G)$										
Gain Range	G = 1 + (49.4 k/K <sub>G</sub> )	1		10,000	1		10,000	1		10,000	
Gain Error <sup>2</sup>	$V_{OUT} = \pm 10 \text{ V}$	*		10,000	1		10,000	•		10,000	
G = 1	V001 - ±10 V		0.03	0.10		0.01	0.02		0.03	0.10	%
G = 10			0.15	0.30		0.10	0.02		0.05	0.30	%
G = 100			0.15	0.30		0.10				0.30	%
G = 1000			0.40	0.70		0.35			0.40	0.70	%
Nonlinearity,	$V_{OUT} = -10 \text{ V to } +10 \text{ V},$		0.40	0.70		0.55	0.50		0.40	0.70	/0
G = 1-1000	$R_L = 10 \text{ k}\Omega$		10	40		10	40		10	40	ppm
G = 1-1000	$R_L = 2 k\Omega$		10	95		10	95		10	95	ppm
Gain vs. Temperature	$Gain < 1000^2$		10	-50		10	-50		10	-50	ppm/°C
Gam vs. Temperature	Gam 1000			-50			-50			-50	ppin/ C
VOLTAGE OFFSET	(Total RTI Error = V <sub>OS1</sub> + V	oso/G)									
Input Offset, V <sub>OSI</sub>	$V_{S} = \pm 5 \text{ V to } \pm 15 \text{ V}$		30	125		15	50		30	125	μV
Over Temperature	$V_S = \pm 5 \text{ V to } \pm 15 \text{ V}$	Y		185			85			225	μV
Average TC	$V_S = \pm 5 \text{ V to } \pm 15 \text{ V}$		0.3	1.0		0.1	0.6		0.3	1.0	μV/°C
Output Offset, Voso	$V_S = \pm 15 \text{ V}$		400	1000		200	500		400	1000	μV
. , , , ,	$V_S = \pm 5 \text{ V}$			1500			750			1500	μV
Over Temperature	$V_S = \pm 5 \text{ V to } \pm 15 \text{ V}$			2000			1000			2000	μV
Average TC	$V_S = \pm 5 \text{ V to } \pm 15 \text{ V}$		5.0	15		2.5	7.0		5.0	15	μV/°C
Offset Referred to the	,, _, ,, ,, ,, ,,								0.0		
Input vs.	A 11										
Supply (PSR)	$V_S = \pm 2.3 \text{ V to } \pm 18 \text{ V}$										
G = 1	13 =2.5 ( 10 = 10 )	80	100		80	100		80	100		dB
G = 10		95	120		100	120		95	120		dB
G = 100		110	140		120	140		110	140		dB
G = 1000		110	140		120	140		110	140		dB
- 1000		110			120	110		***	1 10		
INPUT CURRENT											
Input Bias Current			0.5	2.0		0.5	1.0		0.5	2	nA
Over Temperature				2.5			1.5			4	nA
Average TC			3.0			3.0			8.0		pA/°C
Input Offset Current			0.3	1.0		0.3	0.5		0.3	1.0	nA
Over Temperature				1.5			0.75			2.0	nA
Average TC			1.5			1.5			8.0		pA/°C
INPUT											
Input Impedance											
Differential			10  2			10  2			10  2		GΩ  pF
Common-Mode			10  2			10  2			10  2		$G\Omega pF$
	V = +2 2 V += +5 V	77 1 1 0	10  2	177 1 2	37 . 10		137 1.0	W + 10	10  2	137 1.0	V
Input Voltage Range <sup>3</sup>	$V_S = \pm 2.3 \text{ V to } \pm 5 \text{ V}$	$-V_S + 1.9$		$+V_S - 1.2$	$-V_S + 1.9$		$+V_S - 1.2 + V_S - 1.3$	$-V_S + 1.9$ $-V_S + 2.1$		$+V_S - 1.2$	V
Over Temperature	V = +5 V to +10 V	$-V_S + 2.1$		$+V_S - 1.3$	$-V_S + 2.1$ $-V_S + 1.9$					$+V_{S}-1.3$	V
O T	$V_S = \pm 5 \text{ V to } \pm 18 \text{ V}$	$-V_S + 1.9$		$+V_S - 1.4$			$+V_{S}-1.4$	$-V_S + 1.9$		$+V_{S}-1.4$	
Over Temperature		$-V_S + 2.1$		$+V_{S}-1.4$	$-V_S + 2.1$		$+V_{S}-1.4$	$-V_S + 2.3$		$+V_{S}-1.4$	V
Common-Mode Rejection											
Ratio DC to 60 Hz with											
I kΩ Source Imbalance	$V_{CM} = 0 \text{ V to } \pm 10 \text{ V}$										
G= 1		73	90		80	90		73	90		dB
G = 10		93	110		100	110		93	110		dB
G= 100		110	130		120	130		110	130		dB
G= 1000		110	130		120	130		110	130		dB
OUTPUT											
Output Swing	$R_{L} = 10 \text{ k}\Omega,$										
output omnig	$V_S = \pm 2.3 \text{ V to } \pm 5 \text{ V}$	$-V_S + 1.1$		$+V_{S}-1.2$	$-V_S + 1.1$		$+V_{S}-1.2$	$-V_S + 1.1$		$+V_{S}-1.2$	v
Over Temperature	VS - 12.5 V to 15 V	$-V_S + 1.1$ $-V_S + 1.4$		$+V_S - 1.2$ $+V_S - 1.3$	$-V_S + 1.1$ $-V_S + 1.4$		$+V_S - 1.2$ $+V_S - 1.3$	$-V_S + 1.1$ $-V_S + 1.6$		$+V_S - 1.2$ $+V_S - 1.3$	v
Over Temperature	$V_S = \pm 5 \text{ V to } +18 \text{ V}$	1 5						$-V_S + 1.0$ $-V_S + 1.2$		-	v
Over Temperature	V <sub>S</sub> - ± 3 V 10 + 18 V	$-V_S + 1.2$ $-V_S + 1.6$		$+V_S - 1.4$	$-V_S + 1.2$		$+V_S - 1.4$	$-V_S + 1.2$ $-V_S + 2.3$		$+V_S - 1.4$	V
Short Current Circuit		-v <sub>S</sub> + 1.0	<b>±1</b> 0	$+V_{S}-1.5$	$-V_S + 1.6$		$+V_{S}-1.5$	-v <sub>S</sub> + 2.3	±10	$+V_{S}-1.5$	
	1	1	$\pm 18$			$\pm 18$			$\pm 18$		mA

-2-REV. D

Model	Conditions	Min	AD620 Typ	)A Max	Min	AD620 Typ	B Max	Min	AD620 Typ	S <sup>1</sup> Max	Units
DYNAMIC RESPONSE  Small Signal -3 dB Bandwidth  G = 1  G = 10  G = 100  G = 1000  Slew Rate  Settling Time to 0.01%  G = 1-100	10 V Step	0.75	1000 800 120 12 1.2		0.75	1000 800 120 12 1.2		0.75	1000 800 120 12 1.2		kHz kHz kHz kHz V/µs
G = 1000			150			150			150		μs
NOISE  Voltage Noise, 1 kHz  Input, Voltage Noise, e <sub>ni</sub> Output, Voltage Noise, e <sub>no</sub> RTI, 0.1 Hz to 10 Hz $G = 1$	Total RTI Noise = $\sqrt{(e^2_{mi})}$	$+(e_{no}/G)^2$	9 72 3.0	13 100		9 72 3.0	13 100 6.0		9 72 3.0	13 100 6.0	nV/√ <del>Hz</del> nV/√ <del>Hz</del> μV p-p
G = 10 G = 100–1000 Current Noise 0.1 Hz to 10 Hz	f = 1 kHz		0.55 0.28 100 10			0.55 0.28 100 10	0.8 0.4		0.55 0.28 100 10	0.8 0.4	μV p-p μV p-p fA/√Hz pA p-p
REFERENCE INPUT $R_{\rm IN}$ $I_{\rm IN}$ Voltage Range Gain to Output	$V_{IN+}, V_{REF} = 0$	-V <sub>S</sub> + 1.6	20 +50 1 ± 0	$+V_{S}-1.6$	V <sub>S</sub> + 1.6		+60 +V <sub>S</sub> - 1.6	$-V_S + 1.6$	20 +50 1 ± 0	+60 +V <sub>S</sub> - 1.6	kΩ μΑ V
POWER SUPPLY Operating Range <sup>4</sup> Quiescent Current Over Temperature	$V_S = \pm 2.3 \text{ V to } \pm 18 \text{ V}$	±2.3	0.9 1.1	±18 1.3 1.6	±2.3	0.9 1.1	±18 1.3 1.6	±2.3	0.9 1.1	±18 1.3 1.6	V mA mA
TEMPERATURE RANGE For Specified Performance		-4	0 to +8	5	-40	) to +8	5	-55	to +1:	25	°C

#### NOTES

REV. D -3-

 $<sup>^{1}</sup>$ Does not include effects of external resistor  $R_{G}$ .  $^{2}$ One input grounded. G=1.  $^{3}$ This is defined as the same supply range which is used to specify PSR.  $^{4}$ See Analog Devices military data sheet for 883B tested specifications.

Specifications subject to change without notice.

#### ABSOLUTE MAXIMUM RATINGS1

Supply Voltage
Internal Power Dissipation <sup>2</sup>
Input Voltage (Common Mode) $\pm V_S$
Differential Input Voltage ±25 V
Output Short Circuit Duration Indefinite
Storage Temperature Range (Q)65°C to +150°C
Storage Temperature Range (N, R)65°C to +125°C
Operating Temperature Range
AD620 (A, B)40°C to +85°C
AD620 (S)
Lead Temperature Range
(Soldering 10 seconds) +300°C

#### NOTES

<sup>1</sup>Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational section of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### 8-Pin SOIC Package: $\theta_{JA} = 175$ °C/Watt

#### **ORDERING GUIDE**

Model	Temperature Range	Package Option*
AD620AN	-40°C to +85°C	N-8
AD620BN	−40°C to +85°C	N-8
AD620AR	−40°C to +85°C	R-8
AD620BR	-40°C to +85°C	R-8
AD620A Chips	−40°C to +85°C	Die Form
AD620SQ/883B	−55°C to +125°C	Q-8


<sup>\*</sup>N = Plastic DIP; Q = Cerdip; R = SOIC.

#### **ESD SUSCEPTIBILITY**

ESD (electrostatic discharge) sensitive device. Electrostatic charges as high as 4000 volts, which readily accumulate on the human body and on test equipment, can discharge without detection. Although the AD620 features proprietary ESD protection circuitry, permanent damage may still occur on these devices if they are subjected to high energy electrostatic discharges. Therefore, proper ESD precautions are recommended to avoid any performance degradation or loss of functionality.

#### METALIZATION PHOTOGRAPH

Dimensions shown in inches and (mm). Contact factory for latest dimensions.

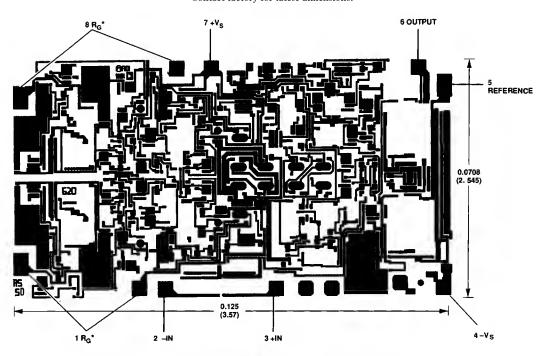

\*FOR CHIP APPLICATIONS: THE PADS  $1R_G$  AND  $8R_G$  MUST BE CONNECTED IN PARALLEL TO THE EXTERNAL GAIN REGISTER  $R_G$ .  $\underline{DQ}$  NOT CONNECT THEM IN SERIES TO  $R_G$ . FOR UNITY GAIN APPLICATIONS WHERE  $R_G$  IS NOT REQUIRED, THE PADS  $1R_G$  May SIMPLY BE BONDED TOGETHER, AS WELL AS THE PADS  $8R_G$ .

<sup>&</sup>lt;sup>2</sup>Specification is for device in free air:

<sup>8-</sup>Pin Plastic Package:  $\theta_{JA} = 95^{\circ}\text{C/Watt}$ 

<sup>8-</sup>Pin Cerdip Package:  $\theta_{JA} = 110^{\circ}$ C/Watt

## Typical Characteristics (@ +25°C, $V_s = \pm 15$ V, $R_t = 2$ k $\Omega$ , unless otherwise noted)

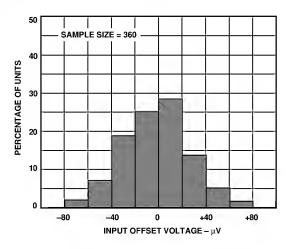


Figure 1. Typical Distribution of Input Offset Voltage

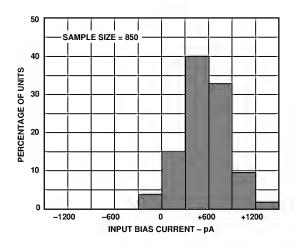


Figure 2. Typical Distribution of Input Bias Current

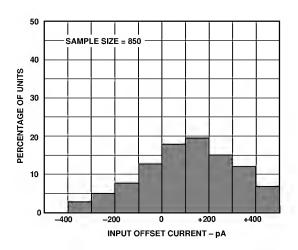


Figure 3. Typical Distribution of Input Offset Current

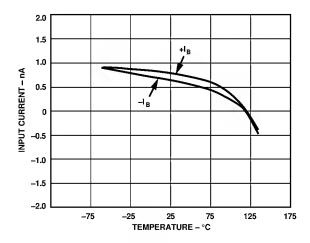


Figure 4. Input Bias Current vs. Temperature

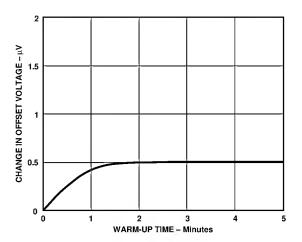


Figure 5. Change in Input Offset Voltage vs. Warm-Up Time

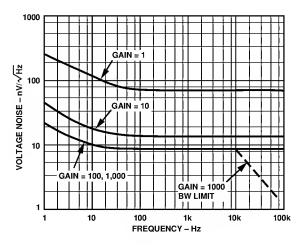


Figure 6. Voltage Noise Spectral Density vs. Frequency, (G = 1-1000)

REV. D –5–

## **AD620-Typical Characteristics**

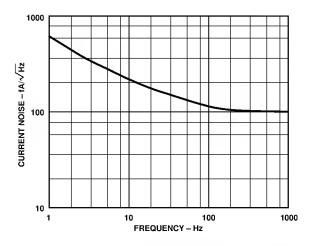


Figure 7. Current Noise Spectral Density vs. Frequency

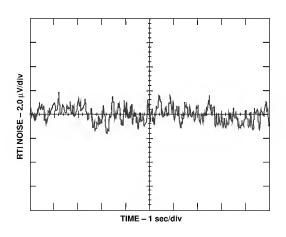


Figure 8a. 0.1 Hz to 10 Hz RTI Voltage Noise (G = 1)

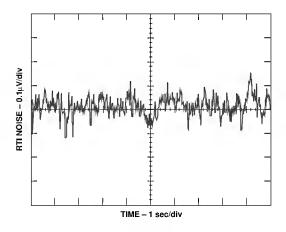


Figure 8b. 0.1 Hz to 10 Hz RTI Voltage Noise (G = 1000)

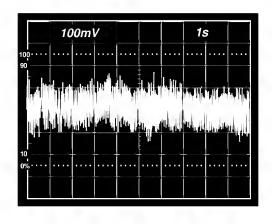


Figure 9. 0.1 Hz to 10 Hz Current Noise, 5 pA/Div

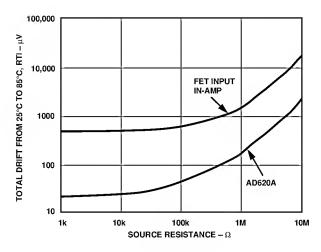


Figure 10. Total Drift vs. Source Resistance

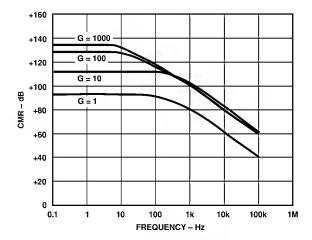


Figure 11. CMR vs. Frequency, RTI, Zero to 1  $k\Omega$  Source Imbalance

-6- REV. D

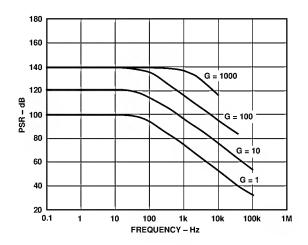


Figure 12. Positive PSR vs. Frequency, RTI (G = 1-1000)

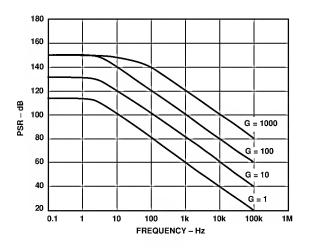


Figure 13. Negative PSR vs. Frequency, RTI (G = 1–1000)

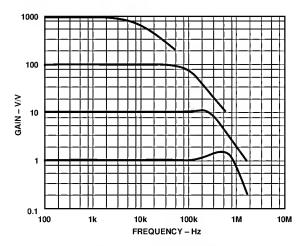


Figure 14. Gain vs. Frequency

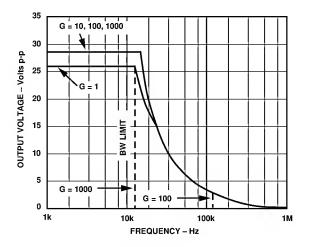


Figure 15. Large Signal Frequency Response

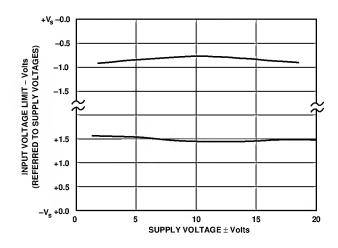


Figure 16. Input Voltage Range vs. Supply Voltage, G = 1

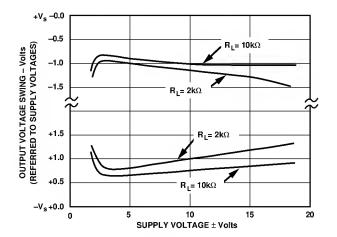


Figure 17. Output Voltage Swing vs. Supply Voltage, G = 10

REV. D -7-

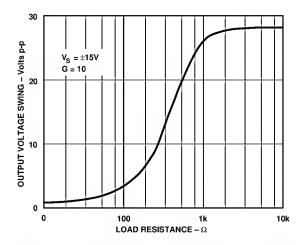


Figure 18. Output Voltage Swing vs. Load Resistance

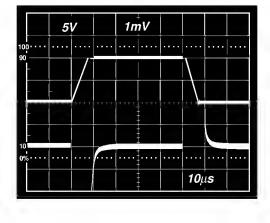


Figure 21. Large Signal Response and Settling Time, G = 10 (0.5 mV = 001%)

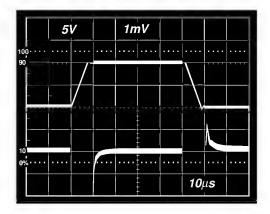


Figure 19. Large Signal Pulse Response and Settling Time G = 1 (0.5 mV = 0.01%)

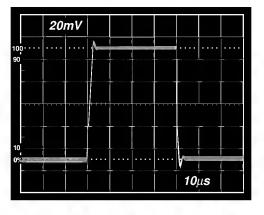


Figure 22. Small Signal Response, G = 10,  $R_L = 2 \text{ k}\Omega$ ,  $C_L = 100 \text{ pF}$ 

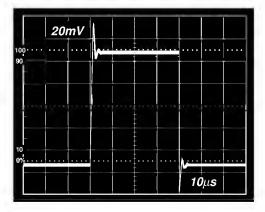


Figure 20. Small Signal Response, G = 1,  $R_L = 2 \text{ k}\Omega$ ,  $C_L = 100 \text{ pF}$ 

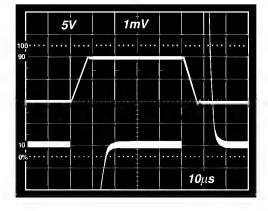


Figure 23. Large Signal Response and Settling Time, G = 100 (0.5 mV = 0.01%)

-8- REV. D

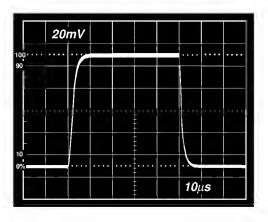


Figure 24. Small Signal Pulse Response, G=100,  $R_L=2~k\Omega$ , CL=100~pF

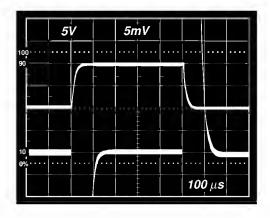


Figure 25. Large Signal Response and Settling Time, G = 1000 (0.5 mV = 0.01%)

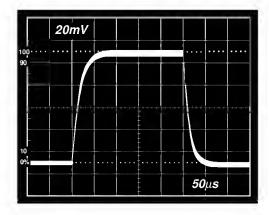


Figure 26. Small Signal Pulse Response, G = 1000,  $R_L = 2 \text{ k}\Omega$ , CL = 100 pF

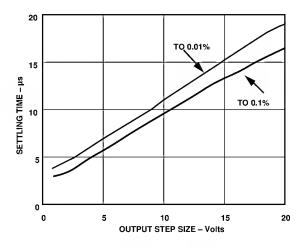


Figure 27. Settling Time vs. Step Size (G = 1)

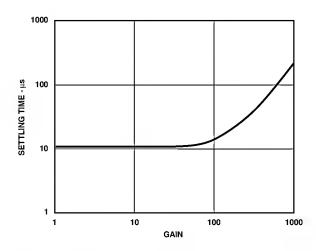


Figure 28. Settling Time to 0.01% vs. Gain, for a 10 V Step

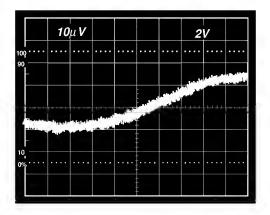


Figure 29a. Gain Nonlinearity, G = 1,  $R_L = 10 \text{ k}\Omega$  (10  $\mu$ V = 1 ppm)

REV. D –9–

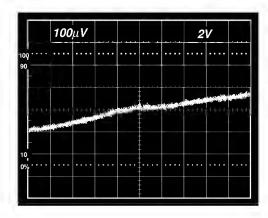


Figure 29b. Gain Nonlinearity, G = 100,  $R_L$  = 10 k $\Omega$  (100  $\mu$ V = 10 ppm)

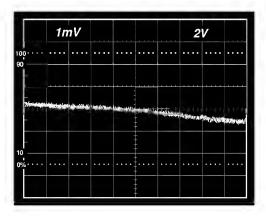


Figure 29c. Gain Nonlinearity, G = 1000,  $R_L = 10 \text{ k}\Omega$  (1 mV = 100 ppm)

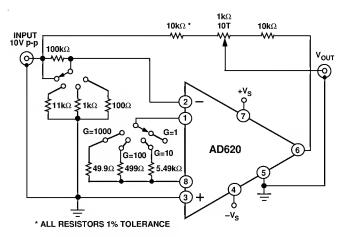


Figure 30. Settling Time Test Circuit

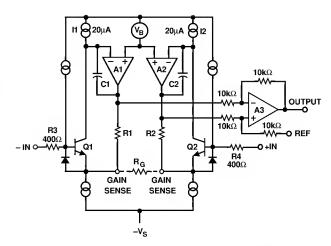


Figure 31. Simplified Schematic of AD620

#### THEORY OF OPERATION

The AD620 is a monolithic instrumentation amplifier based on a modification of the classic three op amp approach. Absolute value trimming allows the user to program gain *accurately* (to 0.15% at G=100) with only one resistor. Monolithic construction and laser wafer trimming allow the tight matching and tracking of circuit components, thus insuring the high level of performance inherent in this circuit.

The input transistors Q1 and Q2 provide a single differential-pair bipolar input for high precision (Figure 31), yet offer  $10\times$  lower Input Bias Current thanks to Superßeta processing. Feedback through the Q1-A1-R1 loop and the Q2-A2-R2 loop maintains constant collector current of the input devices Q1, Q2 thereby impressing the input voltage across the external gain setting resistor  $R_G$ . This creates a differential gain from the inputs to the A1/A2 outputs given by  $G=(R1+R2)/R_G+1$ . The unity-gain subtracter A3 removes any common-mode signal, yielding a single-ended output referred to the REF pin potential.

The value of  $R_G$  also determines the transconductance of the preamp stage. As  $R_G$  is reduced for larger gains, the transconductance increases asymptotically to that of the input transistors. This has three important advantages: (a) Open-loop gain is boosted for increasing programmed gain, thus reducing gain-related errors. (b) The gain-bandwidth product (determined by C1, C2 and the preamp transconductance) increases with programmed gain, thus optimizing frequency response. (c) The input voltage noise is reduced to a value of 9 nV/ $\overline{\text{Hz}}$ , determined mainly by the collector current and base resistance of the input devices.

The internal gain resistors, R1 and R2, are trimmed to an absolute value of 24.7 k $\Omega$ , allowing the gain to be programmed accurately with a single external resistor.

The gain equation is then

$$G = \frac{49.4 \ k\Omega}{R_G} + 1$$

so that

$$R_G = \frac{49.4 \ k\Omega}{G - 1}$$

–10– REV. D

#### Make vs. Buy: A Typical Bridge Application Error Budget

The AD620 offers improved performance over "homebrew" three op amp IA designs, along with smaller size, less components and 10× lower supply current. In the typical application, shown in Figure 32, a gain of 100 is required to amplify a bridge output of 20 mV full scale over the industrial temperature range of -40°C to +85°C. The error budget table below shows how to calculate the effect various error sources have on circuit accuracy.

Regardless of the system it is being used in, the AD620 provides greater accuracy, and at low power and price. In simple systems, absolute accuracy and drift errors are by far the most significant

contributors to error. In more complex systems with an intelligent processor, an auto-gain/auto-zero cycle will remove all absolute accuracy and drift errors leaving only the resolution errors of gain nonlinearity and noise, thus allowing full 14-bit accuracy.

Note that for the homebrew circuit, the OP07 specifications for input voltage offset and noise have been multiplied by  $\sqrt{2}$ . This is because a three op amp type in amp has two op amps at its inputs, both contributing to the overall input error.

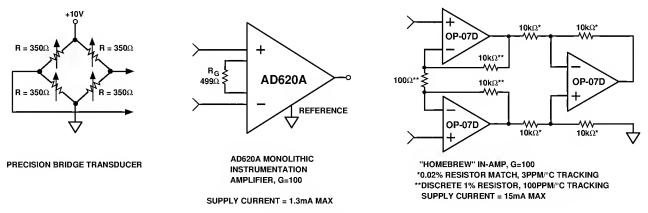


Figure 32. Make vs. Buy

Table I. Make vs. Buy Error Budget

	AD620 Circuit	"Homebrew" Circuit	Error, ppm of Full Scale		
Error Source	Calculation	Calculation	AD620	Homebrew	
ABSOLUTE ACCURACY at $T_A = +25$ °C					
Input Offset Voltage, μV	125 μV/20 mV	$(150  \mu \text{V} \times \sqrt{2})/20  \text{mV}$	6,250	10,607	
Output Offset Voltage, μV	1000 μV/100/20 mV	$((150  \mu \text{V} \times 2)/100)/20  \text{mV}$	500	150	
Input Offset Current, nA	$2 \text{ nA} \times 350 \Omega/20 \text{ mV}$	$(6 \text{ nA} \times 350 \Omega)/20 \text{ mV}$	18	53	
CMR, dB	110 dB $\rightarrow$ 3.16 ppm, $\times$ 5 V/20 mV	(0.02% Match × 5 V)/20 mV/100	791	500	
		Total Absolute Error	7,558	11,310	
DRIFT TO +85°C					
Gain Drift, ppm/°C	(50 ppm + 10 ppm) × 60°C	100 ppm/°C Track × 60°C	3,600	6,000	
Input Offset Voltage Drift, μV/°C	1 μV/°C × 60°C/20 mV	$(2.5 \mu\text{V/}^{\circ}\text{C} \times \sqrt{2} \times 60^{\circ}\text{C})/20 \text{mV}$	3,000	10,607	
Output Offset Voltage Drift, μV/°C	15 μV/°C × 60°C/100/20 mV	$(2.5 \ \mu\text{V/°C} \times 2 \times 60 \text{°C})/100/20 \ \text{mV}$	450	150	
		Total Drift Error	7,050	16,757	
RESOLUTION					
Gain Nonlinearity, ppm of Full Scale	40 ppm	40 ppm	40	40	
Typ 0.1 Hz-10 Hz Voltage Noise, μV p-p	0.28 μV p-p/20 mV	$(0.38 \mu\text{V p-p} \times \sqrt{2})/20 \text{mV}$	14	27	
		Total Resolution Error	54	67	
		Grand Total Error	14,662	28,134	

 $G = 100, V_S = \pm 15 \text{ V}.$ 

(All errors are min/max and referred to input.)

REV. D –11–

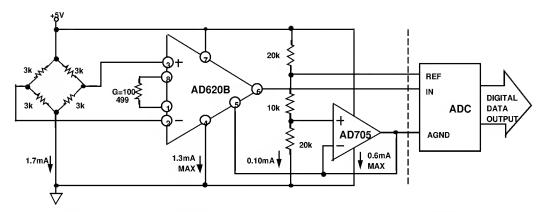


Figure 33. A Pressure Monitor Circuit which Operates on a +5 V Single Supply

#### Pressure Measurement

Although useful in many bridge applications such as weigh scales, the AD620 is especially suited for higher resistance pressure sensors powered at lower voltages where small size and low power become more significant.

Figure 33 shows a 3  $k\Omega$  pressure transducer bridge powered from +5 V. In such a circuit, the bridge consumes only 1.7 mA. Adding the AD620 and a buffered voltage divider allows the signal to be conditioned for only 3.8 mA of total supply current.

Small size and low cost make the AD620 especially attractive for voltage output pressure transducers. Since it delivers low noise and drift, it will also serve applications such as diagnostic non-invasive blood pressure measurement.

#### **Medical ECG**

The low current noise of the AD620 allows its use in ECG monitors (Figure 34) where high source resistances of 1 M $\Omega$  or higher are not uncommon. The AD620's low power, low supply voltage requirements, and space-saving 8-pin mini-DIP and SOIC package offerings make it an excellent choice for battery powered data recorders.

Furthermore, the low bias currents and low current noise coupled with the low voltage noise of the AD620 improve the dynamic range for better performance.

The value of capacitor C1 is chosen to maintain stability of the right leg drive loop. Proper safeguards, such as isolation, must be added to this circuit to protect the patient from possible harm.

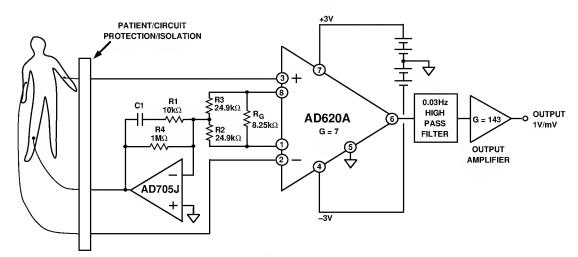


Figure 34. A Medical ECG Monitor Circuit

-12-

#### Precision V-I Converter

The AD620 along with another op amp and two resistors make a precision current source (Figure 35). The op amp buffers the reference terminal to maintain good CMR. The output voltage  $V_{\rm X}$  of the AD620 appears across R1 which converts it to a current. This current less only the input bias current of the op amp then flows out to the load.

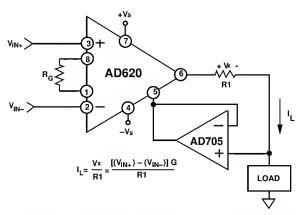


Figure 35. Precision Voltage-to-Current Converter (Operates on 1.8 mA,  $\pm 3$  V)

#### **GAIN SELECTION**

The AD620's gain is resistor programmed by  $R_G$ : or more precisely, by whatever impedance appears between Pins 1 and 8. The AD620 is designed to offer accurate gains using 0.1%-1% resistors. Table II shows required values of  $R_G$  for various gains. Note that for G=1, the  $R_G$  pins are unconnected ( $R_G=\infty$ ). For any arbitrary gain  $R_G$  can be calculated by using the formula:

$$R_G = \frac{49.4 \ k\Omega}{G - 1}$$

To minimize gain error avoid high parasitic resistance in series with  $R_G$ , and to minimize gain drift  $R_G$  should have a low TC—less than 10 ppm/°C for the best performance.

Table II. Required Values of Gain Resistors

1% Std Table Value of $R_G$ , $\Omega$	Calculated Gain	0.1% Std Table Value of $R_G$ , $\Omega$	Calculated Gain	
49.9 k	1.990	49.3 k	2.002	
12.4 k	4.984	12.4 k	4.984	
5.49 k	9.998	5.49 k	9.998	
2.61 k	19.93	2.61 k	19.93	
1.00 k	50.40	1.01 k	49.91	
499	100.0	499	100.0	
249	199.4	249	199.4	
100	495.0	98.8	501.0	
49.9	991.0	49.3	1,003	

#### INPUT AND OUTPUT OFFSET VOLTAGE

The low errors of the AD620 are attributed to two sources, input and output errors. The output error is divided by G when referred to the input. In practice, the input errors dominate at high gains and the output errors dominate at low gains. The total  $V_{\rm OS}$  for a given gain is calculated as:

Total Error RTI = input error + (output error/G)

Total Error RTO = (input error  $\times$  G) + output error

#### REFERENCE TERMINAL

The reference terminal potential defines the zero output voltage, and is especially useful when the load does not share a precise ground with the rest of the system. It provides a direct means of injecting a precise offset to the output, with an allowable range of 2 V within the supply voltages. Parasitic resistance should be kept to a minimum for optimum CMR.

#### INPUT PROTECTION

The AD620 features 400  $\Omega$  of series thin film resistance at its inputs, and will safely withstand input overloads of up to  $\pm 15$  V or  $\pm 60$  mA for several hours. This is true for all gains, and power on and off, which is particularly important since the signal source and amplifier may be powered separately. For longer time periods, the current should not exceed 6 mA ( $I_{\rm IN} \leq V_{\rm IN}/400~\Omega$ ). For input overloads beyond the supplies, clamping the inputs to the supplies (using a low leakage diode such as an FD333) will reduce the required resistance, yielding lower noise.

#### RF INTERFERENCE

All instrumentation amplifiers can rectify out of band signals, and when amplifying small signals, these rectified voltages act as small dc offset errors. The AD620 allows direct access to the input transistor bases and emitters enabling the user to apply some first order filtering to unwanted RF signals (Figure 36), where RC  $\approx 1/(2 \pi f)$  and where  $f \ge$  the bandwidth of the AD620; C  $\le$  150 pF. Matching the extraneous capacitance at Pins 1 and 8, and Pins 2 and 3 helps to maintain high CMR.

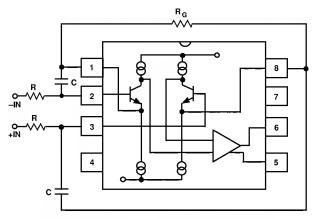


Figure 36. Circuit to Attenuate RF Interference

REV. D –13–

#### **COMMON-MODE REJECTION**

Instrumentation amplifiers like the AD620 offer high CMR which is a measure of the change in output voltage when both inputs are changed by equal amounts. These specifications are usually given for a full-range input voltage change and a specified source imbalance.

For optimal CMR the reference terminal should be tied to a low impedance point, and differences in capacitance and resistance should be kept to a minimum between the two inputs. In many applications shielded cables are used to minimize noise, and for best CMR over frequency the shield should be properly driven. Figures 37 and 38 show active data guards which are configured to improve ac common-mode rejections by "bootstrapping" the capacitances of input cable shields, thus minimizing the capacitance mismatch between the inputs.

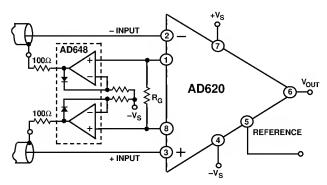


Figure 37. Differential Shield Driver

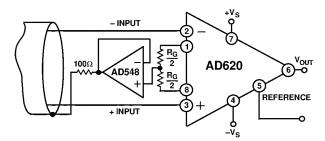


Figure 38. Common-Mode Shield Driver

#### **GROUNDING**

Since the AD620 output voltage is developed with respect to the potential on the reference terminal, it can solve many grounding

problems by simply tying the REF pin to the appropriate "local ground."

In order to isolate low level analog signals from a noisy digital environment, many data-acquisition components have separate analog and digital ground pins (Figure 39). It would be convenient to use a single ground line, however, current through ground wires and PC runs of the circuit card can cause hundreds of millivolts of error. Therefore, separate ground returns should be provided to minimize the current flow from the sensitive points to the system ground. These ground returns must be tied together at some point, usually best at the ADC package as shown

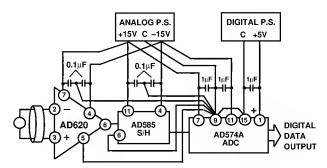


Figure 39. Basic Grounding Practice

#### GROUND RETURNS FOR INPUT BIAS CURRENTS

Input bias currents are those currents necessary to bias the input transistors of an amplifier. There must be a direct return path

-14- REV. D

for these currents; therefore when amplifying "floating" input

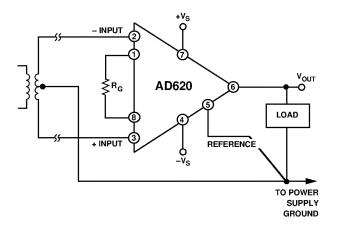


Figure 40a. Ground Returns for Bias Currents with Transformer Coupled Inputs

sources such as transformers, or ac-coupled sources, there must be a dc path from each input to ground as shown in Figure 40. Refer to the *Instrumentation Amplifier Application Guide* (free from Analog Devices) for more information regarding in amp applications.

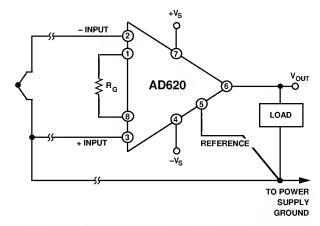


Figure 40b. Ground Returns for Bias Currents with Thermocouple Inputs

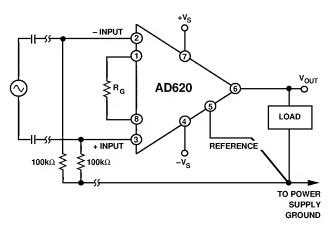



Figure 40c. Ground Returns for Bias Currents with AC Coupled Inputs

REV. D –15–


#### **OUTLINE DIMENSIONS**

Dimensions shown in inches and (mm).


#### Plastic DIP (N-8) Package

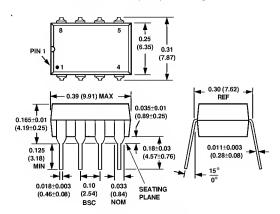

Cerdip (Q-8) Package

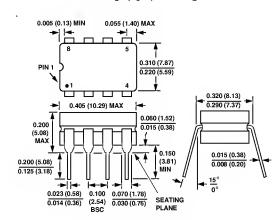

SOIC (R-8) Package

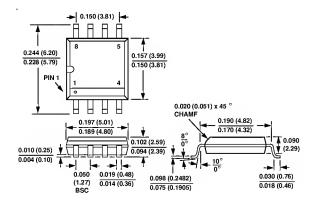

All brand or product names mentioned are trademarks or registered trademarks of their respective holders.